
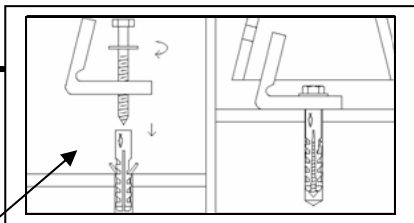


FIGURA 1

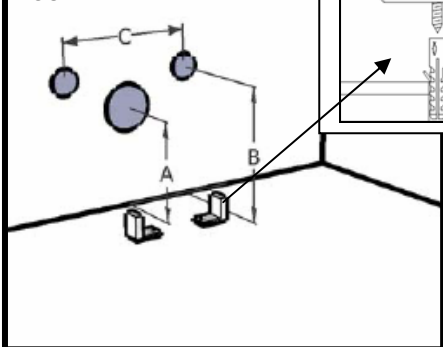

**Istruzioni per l'installazione bidet filo parete  
FLAT**  
**Assembling instructions for back to wall Bidet  
FLAT**

1) Dopo aver predisposto gli scarichi secondo le quote riportate nella tabella, bloccare le due staffe a L per il fissaggio del Bidet  
*Prepare the draining according to the dimensions of the technical scheme.*

*After having arranged the drains according to the dimensions of the technical scheme, lock the two brackets at L to the floor .*

| LINE | COD  | A   | B   | C   |
|------|------|-----|-----|-----|
| FLAT | FL14 | 100 | 200 | 100 |

2) Installare la rubinetteria e sifone, fare attenzione al canotto di scarico che deve fuoriuscire dalla ceramica per la misura necessaria ad innestarsi nel bocchettone sulla parete.  
*Position the piece on the fixings and connect the feed flexible pipes, let the sanitary ware slide until the wall, paying attention that the pipe inserts into the pipe union at wall.*

*Install the taps and the siphon, pay attention to the draining tube that must protrude sufficiently from the ceramics to be connected into the pipe union on the wall.*

*Position the piece on the fixings and connect the feed flexible pipes; let the sanitary ware slide until the wall, paying attention that the pipe inserts into the pipe union at wall.*

*Position the piece on the fixings and connect the feed flexible pipes; let the sanitary ware slide until the wall, paying attention that the pipe inserts into the pipe union at wall.*

3) Spingere il sanitario verso il muro, serrate con la ferramenta in dotazione.  
*Push the sanitary ware against the wall, lock by the fixing kit included.*

*Push the sanitary ware against the wall, lock by the fixing kit included.*

FIGURA 2

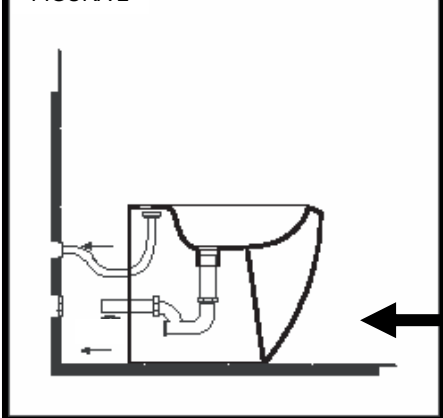


FIGURA 3

